



SAILMAKER'S GUIDE

52 9.2 meter AFT Cockpit

MODEL 9.2A

MODEL YEAR 1984

- | | |
|----------------------------|---------------------|
| 1. MAINSAIL AREA (sq. ft.) | <u>208</u> |
| 2. CLASS JIB (sq. ft.) | <u>260</u> |
| 3. REEFING POINTS | <u>One Set Std.</u> |
| 4. MAST TUNNEL SIZE | <u>3/4" "T"</u> |
| 5. MAINSAIL FEEDER TYPE | <u>Slide</u> |
| 6. TACK FITTING SET BACK | <u>2"</u> |
| 7. TACK FITTING SET DOWN | <u>2"</u> |
| 8. BOOM TUNNEL SIZE | <u>5/16"</u> |
| 9. TYPE of LUFF SLIDE | <u>3/4" "T"</u> |
| 10. "I" DIMENSION | <u>40.0'</u> |
| 11. "J" DIMENSION | <u>13.0'</u> |
| 12. "P" DIMENSION | <u>34.0'</u> |
| 13. "E" DIMENSION | <u>12.25'</u> |



SAILMAKER'S GUIDE

MODEL 9.2A

MODEL YEAR 1985

- | | |
|----------------------------|--|
| 1. MAINSAIL AREA (sq. ft.) | <u>208</u> |
| 2. CLASS JIB (sq. ft.) | <u>260</u> |
| 3. REEFING POINTS | <u>One Set Std.</u> |
| 4. MAST TUNNEL SIZE | <u>.490" Dia. w/ .200" Opening</u>
<u>1 1/2" Slot</u>
<u>3 1/2" up from boom</u> |
| 5. MAINSAIL FEEDER TYPE | <u>Center of Pin</u>
<u>1 3/4" aft of mast</u> |
| 6. TACK FITTING SET BACK | <u>Center of Pin</u>
<u>7/8" up from boom</u> |
| 7. TACK FITTING SET DOWN | |
| 8. BOOM TUNNEL SIZE | <u>.490" Dia. w/ .200" Opening</u> |
| 9. TYPE of LUFF SLIDE | <u>3/8" Slug</u> |
| 10. "I" DIMENSION | <u>40.0'</u> |
| 11. "J" DIMENSION | <u>13.0'</u> |
| 12. "P" DIMENSION | <u>34.0'</u> |
| 13. "E" DIMENSION | <u>12.25'</u> |