

STREAKER STANDARD SAIL

Note.

The leech is divided equally by folding. Place the foretop corner of the sail head over the clew corner, fold twice. These are the batten datumns, sail widths are taken from these points. The sail cloth shall be free from wrinkles.

Rule 68 - 3 Batten pockets. The centres positioned to leech measurement points.


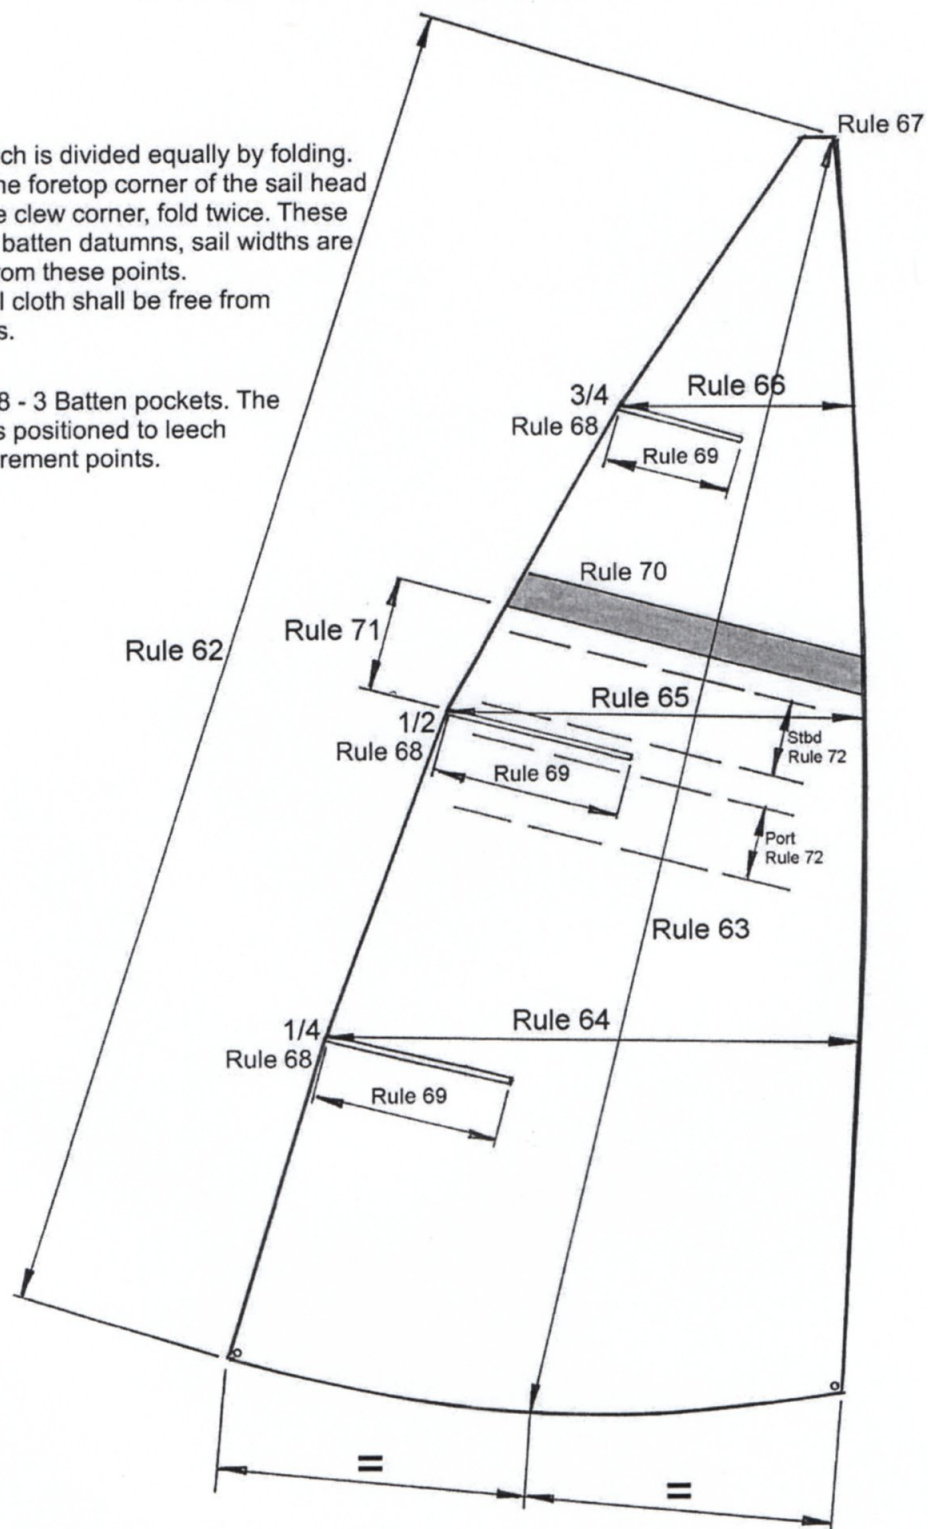


Diagram 3

NOTE

This diagram is to be used with the measurement form to determine points of measurement.

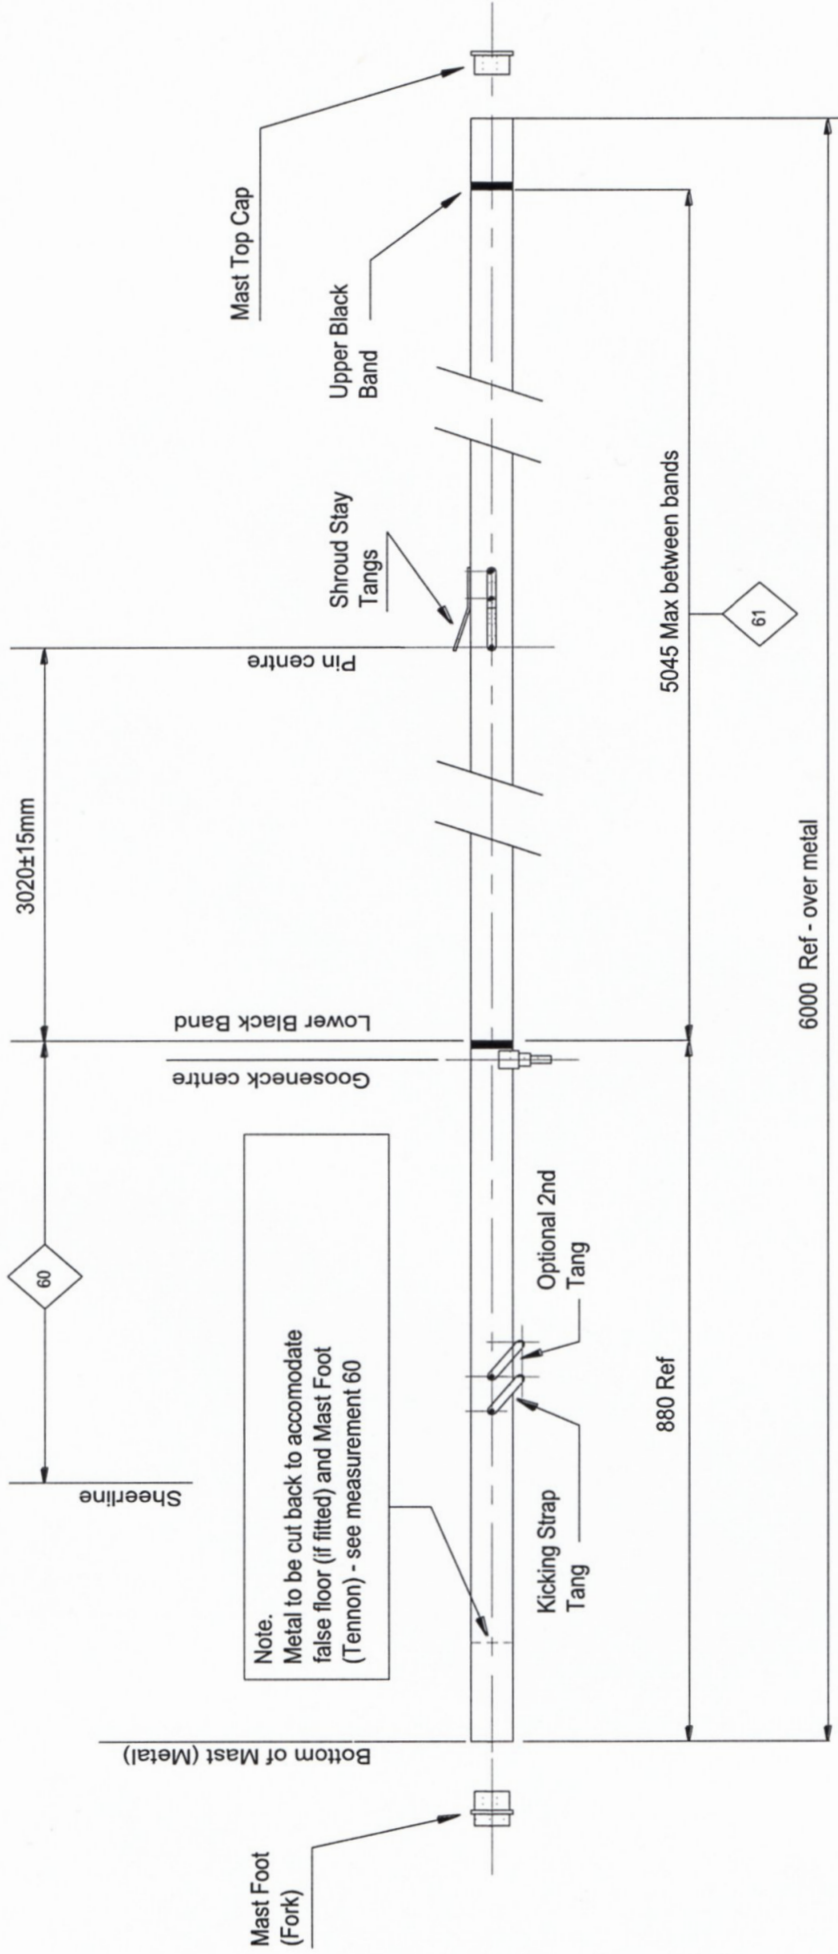

STREAKER ALLOY MAST - Supplied by :-

Selden - LAMBDA Section

or

Superspars - MHR Section

STREAKER CLASS OWNERS ASSOCIATION
GUIDE TO BUILDER & MEASURERS
- SHEET No 8 (SPARS)

ISSUE 1 November 2011