


Wingnets


Saibrite
Kits

305 West Van Buren St., P.O. Box 987
Columbia City, IN 46725
Phone 219-244-6715
FAX 219-244-4184
Tollfree 1-800-348-2769

① cut parts




② sew webbing to three edges

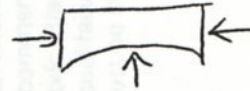

③ Tape 4th edge with boltrope insert

3/8" rope

4" TAPE

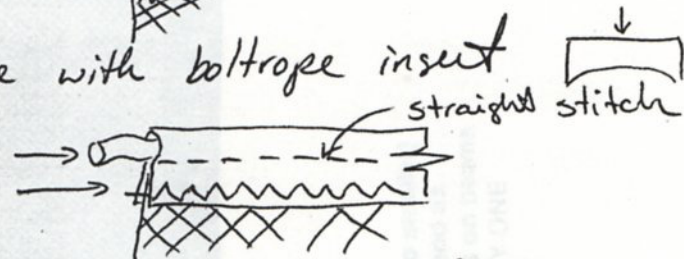


④ Tape remaining three edges with 11" Tape and insert 1/4" boltrope.




Note: At top corners leave gap



GAP

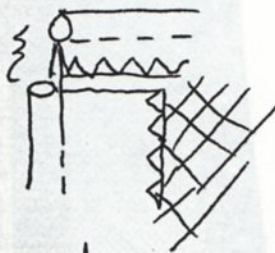

⑤ install grommets as shown on plan.
(Place Just inside rope)

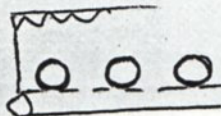

Scale 1:16

9mm/3/8" bolt
rope (or to suit
extrusion)

AFT END

795
31 1/4"

795
31 1/4"

795
31 1/4"

795
31 1/4"

795
31 1/4"

795
31 1/4"

795
31 1/4"

795
31 1/4"

795
31 1/4"

795
31 1/4"

795
31 1/4"

795
31 1/4"

38
1 1/2"

38
1 1/2"

38
1 1/2"

38
1 1/2"

38
1 1/2"

38
1 1/2"

38
1 1/2"

38
1 1/2"

38
1 1/2"

38
1 1/2"

38
1 1/2"

38
1 1/2"

38
1 1/2"

129mm
5 1/8"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

129mm
5 1/8"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

FRONT
(lacing holes
offset different
from aft end)

1330 (52 3/8")

1291 (50 7/8")

1318 (51 7/8")

129mm
5 1/8"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

129mm
5 1/8"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

129mm
5 1/8"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

50mm/2"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

155
6 3/32"

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

1427
(56 1/4")

inner side eyelets spaced evenly
as shown

All eyelets to be 19mm/3/4" (no smaller)
with exactly six used at each end as
shown. Position matches eyes on beams
so don't change. Use TWENTY ONE
eyelets along inner side

Netting must be of an open weave with
min. 6mm1/4" holes. Fablok style #9407
recommended. Do not use a solid
fabric. Black color recommended.
Usual failure point is eyelets, so these
must be strongly mounted

F-25A WINGNETS

2 per boat (1 Port and 1 Starboard) from suitable netting, with
heavy Dacron tape around edges

FARRIER MARINE

P.O. Box 40675, Bellevue, WA 98015-4675

November 26, 1992

