
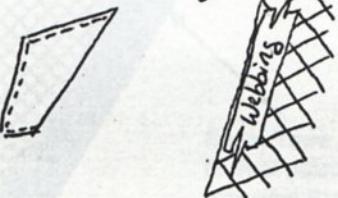


"Bownets"

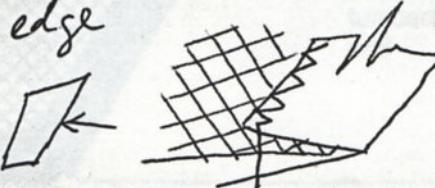


305 West Van Buren St., P.O. Box 987
Columbia City, IN 46725
Phone 219-244-6715
FAX 219-244-4184
Tollfree 1-800-348-2769

- ① Cut parts 
- ② sew webbing to three edges 
- ③ Tape fourth edge 
- ④ Tape all other edges inserting a boltrope.


sew a straight stitch to push rope as far forward in sleeve as possible.
- ⑤ Attach sleeve 

sew vera ends
- ⑥ Install grommets as positioned on plan.
Should be placed just inside rope.

Copyright Reserved
© 1993 by Ian Farrer

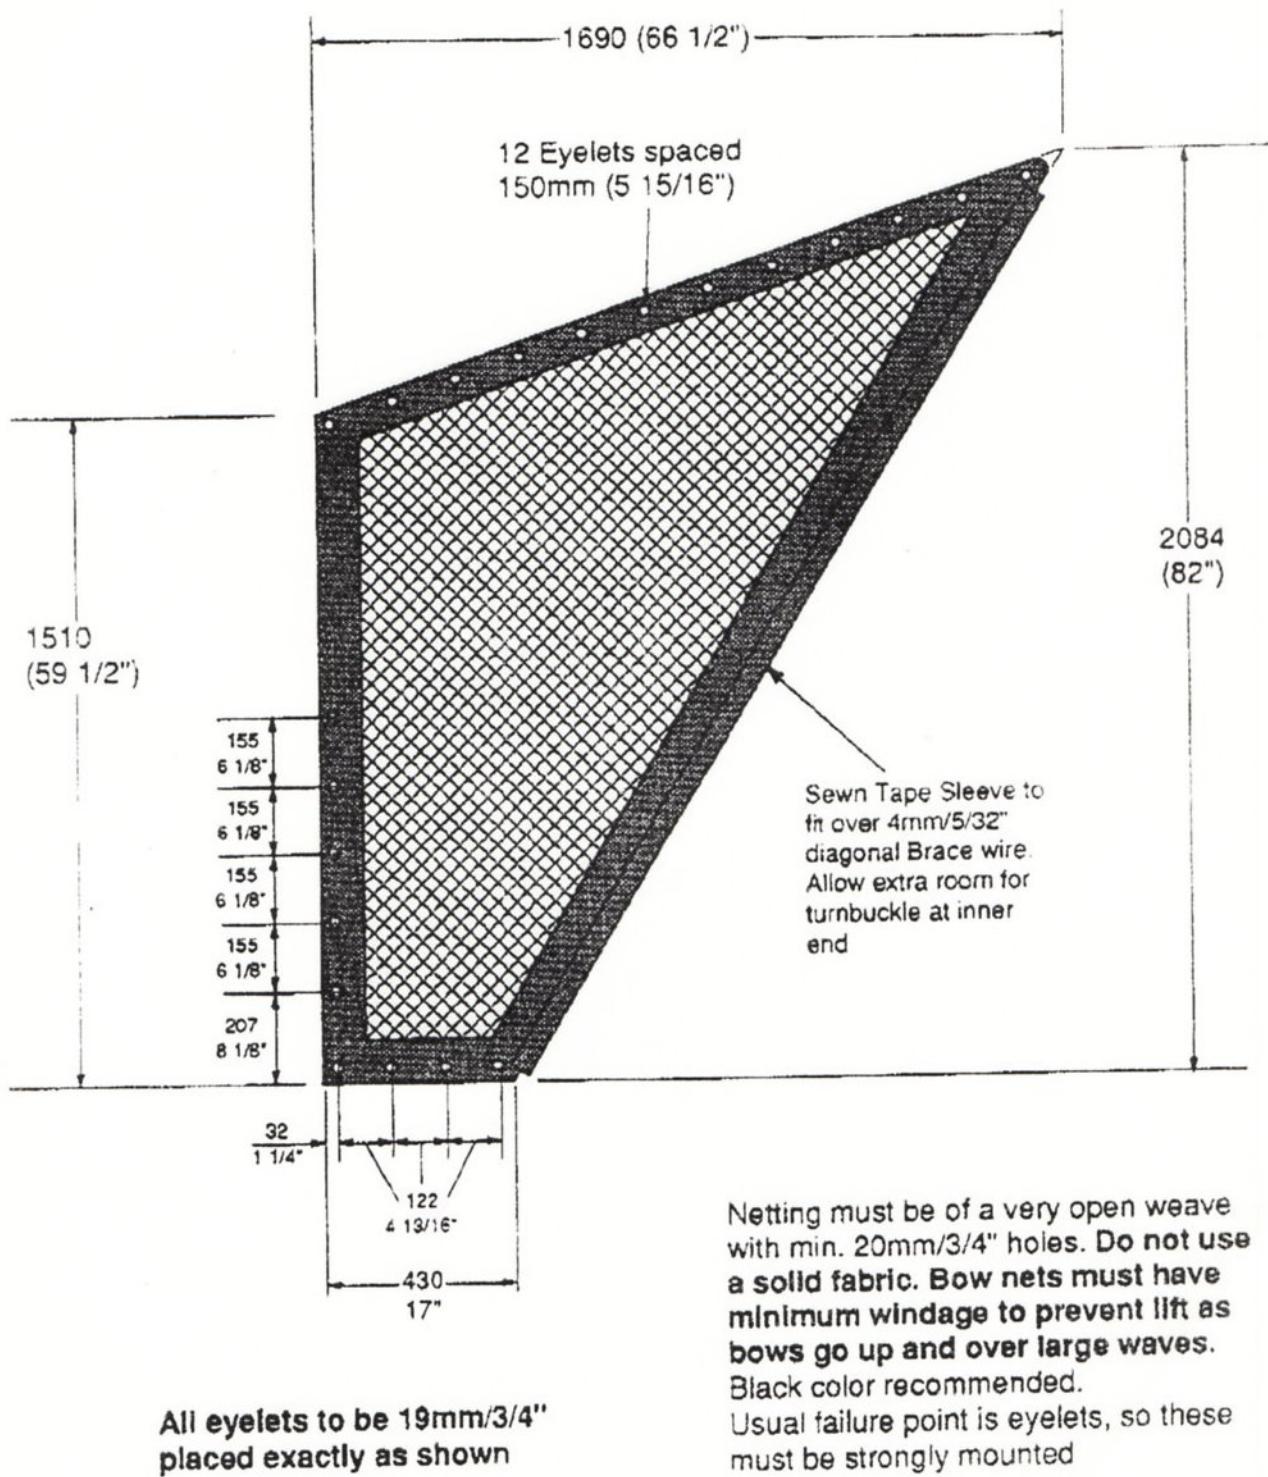

BOWNETS

2 per boat (1 Port and 1 Starboard) from suitable netting, with heavy Dacron tape around edges

February 16, 1993

FARRIER MARINE
P.O. Box 40675, Bellevue, WA 98015-4675