

4-Step Sail-Pocket Construction

A. Fold pocket and cut holes through both layers

B. Align Holes

C. cov

3-Step Batten Attachment

X. Position Batten and cut holes on both sides

Y. Overlap 2 layers of tape to cover Batten and both sides of sail

Z.

Tape over ends

3" wide pocket

After taping pocket, attach grommet to top and bottom corners of Jib. Tie Spring Clip Snap Hook to top grommet.




JIB

Tie Str
in cor
on Bu

Screw-Eye

Quick-Release Cleat

16-1/2"

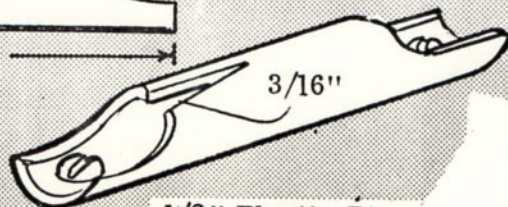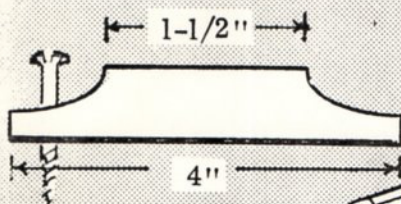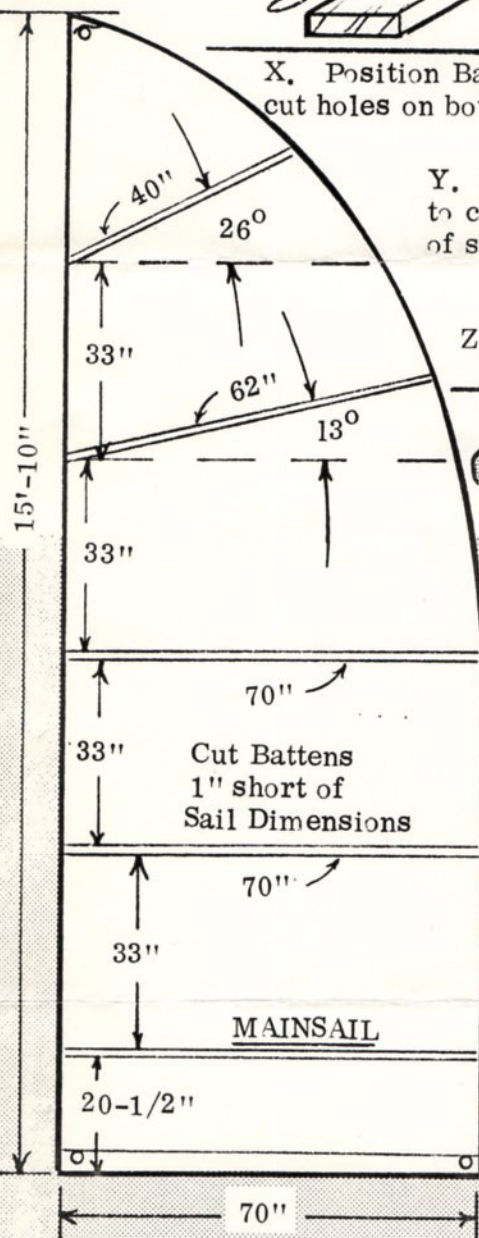

1/2" Plastic Pipe

